

JVCW-427

## ***CUP WARMER***

カップ ウォーマー

電保温杯墊

Product of : Tiggu Logistechs

Website : [www.tiggu.com](http://www.tiggu.com)

Distributed by : Javy's International Ltd.

Tel : 3669-1000

E-mail : [sales@javys.com](mailto:sales@javys.com)

Website : [www.javys.com](http://www.javys.com)

## INTRODUCTION

This is an energy efficient appliance, designed for any of today's coffee, tea, and other beverages.

This product is made for those who want their brew kept "hot to the last minute"; Modern technology allows you to keep the food on the warmer at just the right temperature all day.

Appliance can also be used to keep other products warm such as instant soup.

Eliminates cold coffee, tea, and soups economically.

You will have less waste if you can keep your beverage/food warm longer.

- Temperature controlled metal heating surface.

## Not warning comments :

- Always unplug this warmer after using or before cleaning.
- Do not wash in or drop into water.
- Do not leave appliance unattended when in operation.
- To avoid burn hazard do not let heated surface touch bare skin.
- This product is intended for ceramic cup, mug, metal can or dish only, not for plastic or Styrofoam.
- Not recommended to be used by children without parental supervision.

## FEATURES

1. HEATING PAD: place a cup on it and keep it warm.
2. Auto on/off switch and light.
3. INDICATOR : lights up when power is on.

## CLEANING

1. Unplug the appliance and allow it to fully cool down before cleaning.
2. Clean with a damp cloth or sponge using a mild soap. Do not use harsh detergents, solvents or abrasives.
3. DO NOT IMMERSE THIS APPLIANCE IN WATER OR ANY OTHER LIQUID TO CLEAN IT.
4. Dry thoroughly before use :

## SAFETY PRECAUTIONS

When using electrical appliance, basic safety precautions should always be observed to include the following :

1. Read all instructions.
2. Do not touch hot surfaces. Handle plastic sides only when moving appliance.
3. To protect against electrical shock, do not immerse cord, plugs, or any other part of the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off components /parts.
6. Do not operate any appliance with a damaged cord or plug or in the event the appliance malfunctions or has been damaged in any manner. Return appliance to the authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let appliance cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place appliance on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. To disconnect appliance from wall outlet, turn control to "OFF", then remove plug from wall outlet.
13. Do not use appliance for other than intended use. Only use as listed in this instruction sheet.
14. Save these instructions for future reference.




## IMPORTANT

The mains cable attached to this appliance has already been fitted with a pre-wired approved 13A plug incorporating a 3A fuse. If the plug does not fit your socket outlet then remove and discard it. Carefully prepare the end of the cable and fit an alternative plug, following the manufacturer's instructions. If the plug is intended to take a fuse then a 3A fuse must be used.

The wires in the mains lead are colored in accordance with the following code:


Blue : Neutral  
Brown : Live

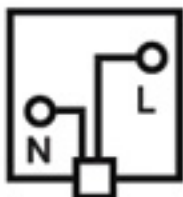

If the colors of the wires in this mains lead do not correspond with the colored marking in your plug then proceed as follows:

Connect the Blue wire to the terminal marked N or colored black.

Connect the Brown wire to the terminal marked L or colored red.

Never connect either of the wires to the EARTH terminal marked E or (  ) or colored green and yellow. The plug must be protected by a 3 amp fuse.

The mains cable fitted to this appliance cannot be replaced. In the event of damage the appliance must be discarded.

## SPECIFICATION

This appliance has been designed for operation at 220V-230V AC ~ 50Hz 23W.

Retain these instructions for future reference.

- 切勿觸摸保溫杯墊發熱面，只適用於放陶瓷、金屬容器，切勿放塑膠及泡沫塑膠料製品。
- 用後請把開關掣關掉，然後拔去電源。